


Privacy Screen *MC4022*

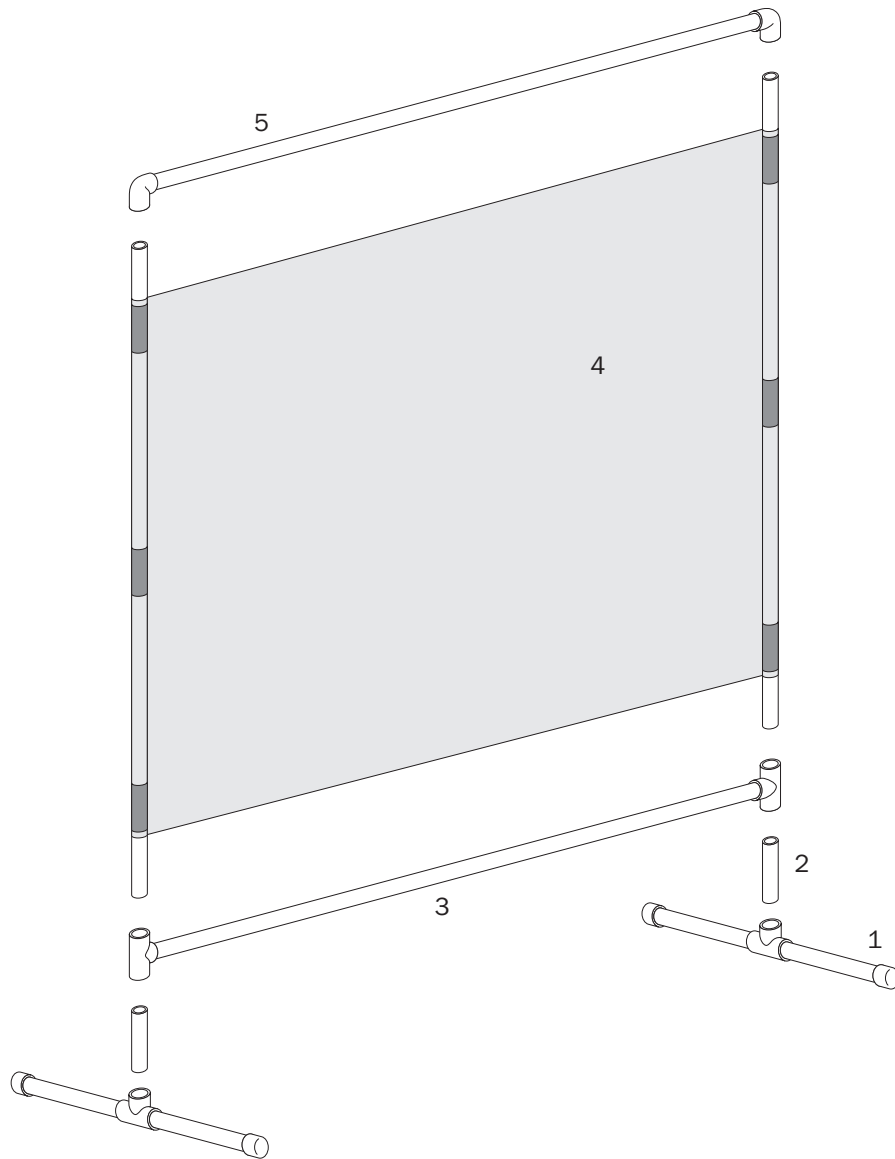

Assembly Instructions

- A. Remove, inspect, and count all parts (see Parts List below).
- B. Use one Leg Extender (#2) to connect each Leg (#1) to the Lower Cross Member (#3).
- C. Unroll Screen Assembly (#4) and insert a side pole in each end of Lower Cross Member.
- D. Insert top end of each Side Pole into elbows of Upper Cross Member (#5).
- E. Adjust tension on screen by scrolling side poles in opposite directions.
- F. Pull down gently at top corners of Upper Cross Member to tighten connections.
- G. Sandbags (not included) may be placed on Legs or hung over Lower Cross Member near Side Poles.

Parts List *Replacement parts are available, contact DQE to order.*

PART NAME	QTY	PART NUMBER
1. 24" Legs		2
2. 6" Leg Extenders		2
3. Lower Cross Member		1
4. Screen Assembly with Side Poles		1
5. Upper Cross Member		1
6. Plastic bag with Instruction Sheet (not shown)		1
7. Spare Fabric Screen (not shown)		1

Replacement Fabric Screen 3-Pack available as Item# MC4022RS

Privacy Screen *MC4022*

Screen Replacement

- A. Remove the six Fabric Clamps.
- B. Discard old Fabric Screen.
- C. Lay shorter sides of new Fabric Screen over Side Poles.
- D. Reinstall three Fabric Clamps on each Side Pole.
- E. Reassemble and adjust tension on screen by scrolling side poles in opposite directions.