
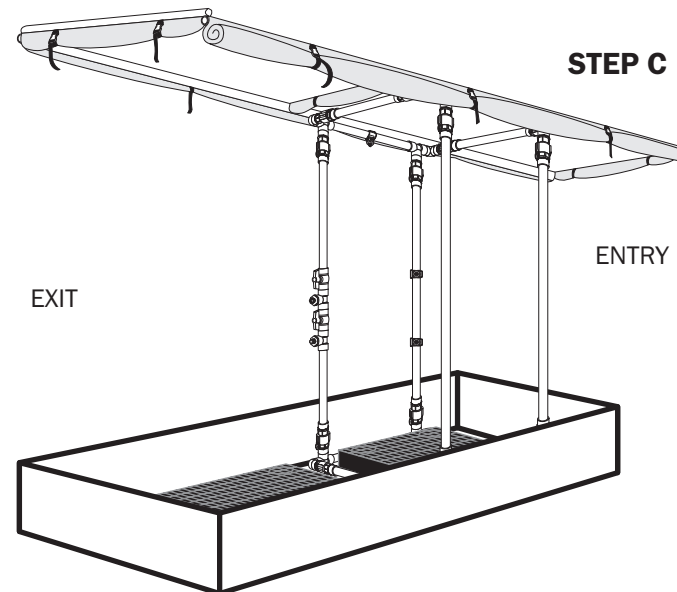
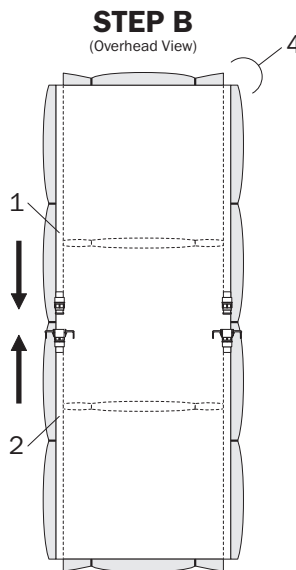


**SAVE THESE INSTRUCTIONS** FOR IMPORTANT OPERATING AND PARTS INFORMATION

## Decon Privacy Corridor *HM1003*

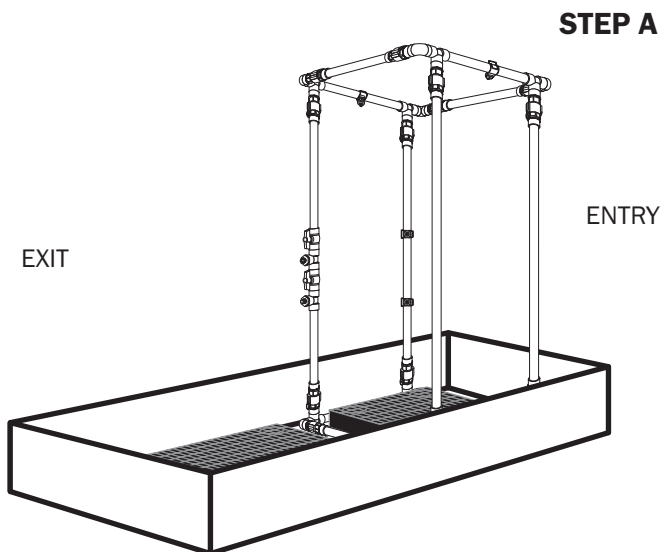

### Parts List *Replacement parts are available, contact DQE to order.*



PART NAME	QTY	PART NUMBER
1. Corridor Support Pole (Male)	2	HMPT10031
2. Corridor Support Pole (Female)	2	HMPT10032
3. Roof Support Cross Rod	2	HMPT10033
4. Corridor Vinyl Enclosure	1	0209-862132
5. Sandbag	2	HM1075
6. Duffle Bag (not pictured)	1	BAGPC

### Corridor Assembly

- The Decon Privacy Corridor (HM1003) is designed to enhance the DQE Standard Decontamination Shower (HM1001C) and Standard Collection Pool—4'x8' (HM1048). To use the Decon Privacy Corridor, first set up the Standard Decontamination Shower and place the shower at one end of the Standard Collection Pool. Do not install the shower enclosure that comes with the Standard Decontamination Shower unit.
- Remove the Privacy Corridor from duffle bag and unfold the Corridor Vinyl Enclosure (#4), making sure to place it on the ground so that rolled up center panels are face down. Connect the Corridor Support Poles (#1 and #2) on each side. NOTE: Before beginning step C, keep blue vinyl that is secured by plastic buckles in the rolled position.
- Lift and center the Corridor Vinyl Enclosure (#4) on top of the assembled Standard Decontamination Shower, so that the center of the coupled joints are aligned with the two showerheads. The blue rolled center partitions should be in front and behind shower stall area.

Continued from front side.

## Decon Privacy Corridor HM1003

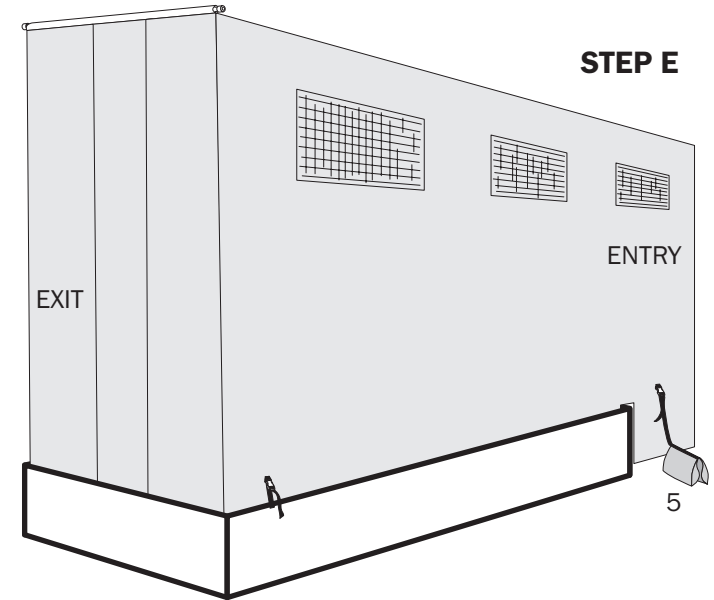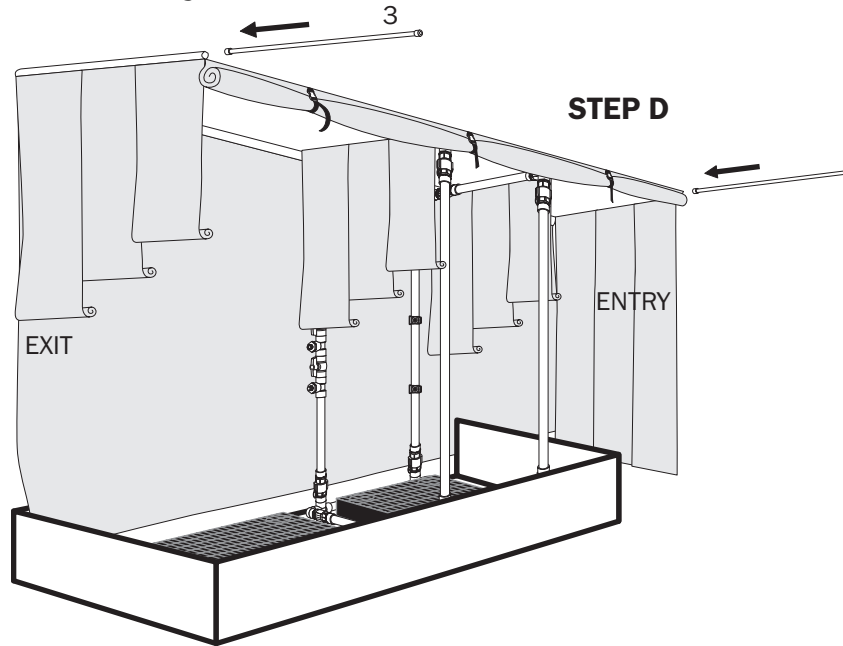

### Corridor Assembly *Continued*

- D. Unbuckle straps to allow all blue center partitions and outside walls to drape. Insert a Roof Support Cross Rod (#3) in pockets at entry and exit ends of corridor roof. Both ends of the Roof Support Cross Rods must rest on the ends of the Corridor Support Poles.
- E. Position the outside vinyl walls inside the pool liner. Use straps on the sidewalls at exit to secure corridor to the pool frame. Attach Sandbags (#5) with straps to stabilize corridor walls at entry.

### Dismantling the Corridor

1. Once the Corridor has been properly decontaminated, and/or deemed safe for reuse, allow the corridor to fully dry.
2. Roll up both side walls and secure with buckle system.
3. Roll up all four privacy panels and secure with buckle system.
4. Remove the Roof Support Cross Rods from roof pockets.
5. Remove Corridor from top of assembled shower and lay on clean dry surface.
6. Disconnect the couplers in the middle and fold the Corridor length in half. Roll Corridor lengthwise in order to fit into the duffle bag.