


MASCAS™ Instruction Sheet

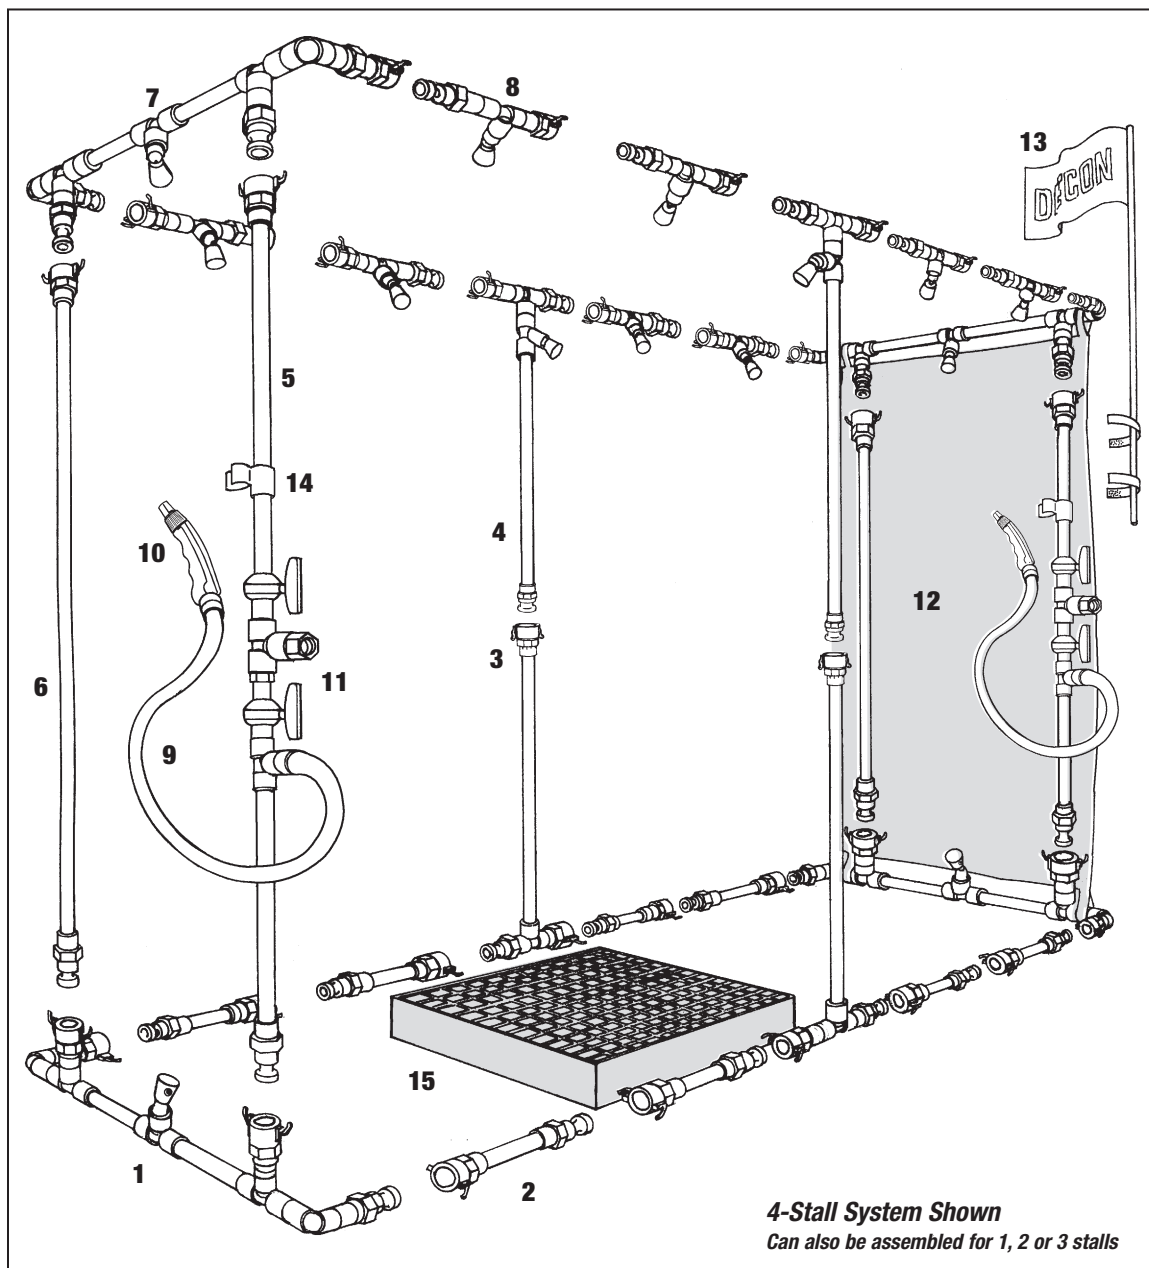

4-Stall System Shown
Can also be assembled for 1, 2 or 3 stalls

A Remove, inspect and count all parts (see parts list below).

Note: All bottom pieces are marked in blue, all top pieces are marked in red ("red roof/blue base")

B Connect Bottom U-Bases (#1) and Bottom Extenders (#2).

Note: For a 1 and 2-stall system, this completes the bottom section. Move to step D.

C For 3-stall and 4-stall system, connect bottom extenders to bottom T-Posts (#3).

D Insert shower uprights (#5 & #6) into corners of base.

Note: Uprights with valve assemblies should be placed on the side nearest water supply.

E Connect Top U-Bases (#7) to uprights.

F Connect Top Extenders (#8) to Top U-Bases.

G For 3-stall & 4-stall system, connect top extenders to top T-Posts (#4).

H Connect hand-held shower hoses (#9) with nozzle (#10) to bottom outlet of valve assemblies. Screw in pressure reducing valve (#11) to top hose fitting of valve assembly.

I Place Elevation Grids (#15) inside shower base at each stall (optional).

J Attach privacy dividers (#12) to establish four separate decon stalls.

K Attach decon flag (#13) using velcro straps to any of the six uprights.

L Attach black plastic Hose Hanger (#14) onto Valve upright above the valve assembly. Press firmly until Hanger clamps around pipe.

You're Done!!

For Storage:

After use, clean and let fully dry before storage. For best storage and to reduce breakage, re-assemble U-Bases in the same manner (small rectangle) as shipped from manufacturer.

Caution:

Regulate water temperature to avoid scalding.

MASCAS Parts List

	Description	Qty.
#1	Bottom U-Base (blue tape)	2
#2	Bottom Extender (blue tape)	8
#3	Center Support T-Post (bottom)	2
#4	Center Support T-Post (top)	2
#5	Valve Upright	2
#6	Standard Upright	2
#7	Top U-Base (red-tape)	2
#8	Top Extender (red tape)	8
#9	Hand-held Spray Hose	2
#10	Hand-held Spray Nozzle	2
#11	Pressure Reducing Valve	2
#12	Privacy Divider	5
#13	Decon Flag w/pole	1
#14	Hand-held Hose Hanger	2
#15	Elevation Grid (optional)	4